

# Can Filter RH Test

## Table of contents

---

Getting Started .....	3
Getting help .....	3

## Getting Started

---

### Getting help

Self test CAN Filter check internal functionality and test CANs work properly

For self test Can Filter

All operation do on bench . only required Can Filter and power supply 12v

1. Set All Switches (1,2,3,4) OFF
2. Connect CAN H1 + CAN H2 ( white + green)
3. Connect CAN L1 + CAN L2 ( blue + yellow)
4. Connect 12V and GND to power supply.

Now Can Filter will blink SW version. For example blink 2 times , pause , 3 time , pause ,4 times, pause - it mean sw in can filter is 234. After that it should blink very fast - it mean CAN works ok.

IF can filter show sw and not blink very fast please check is it connections described in point 2 and 3 are ok