

Emulator_Renault_CAN_R H


Table of contents

Getting Started	3
System requirements	3
Getting help	3

Getting Started

System requirements

Getting help

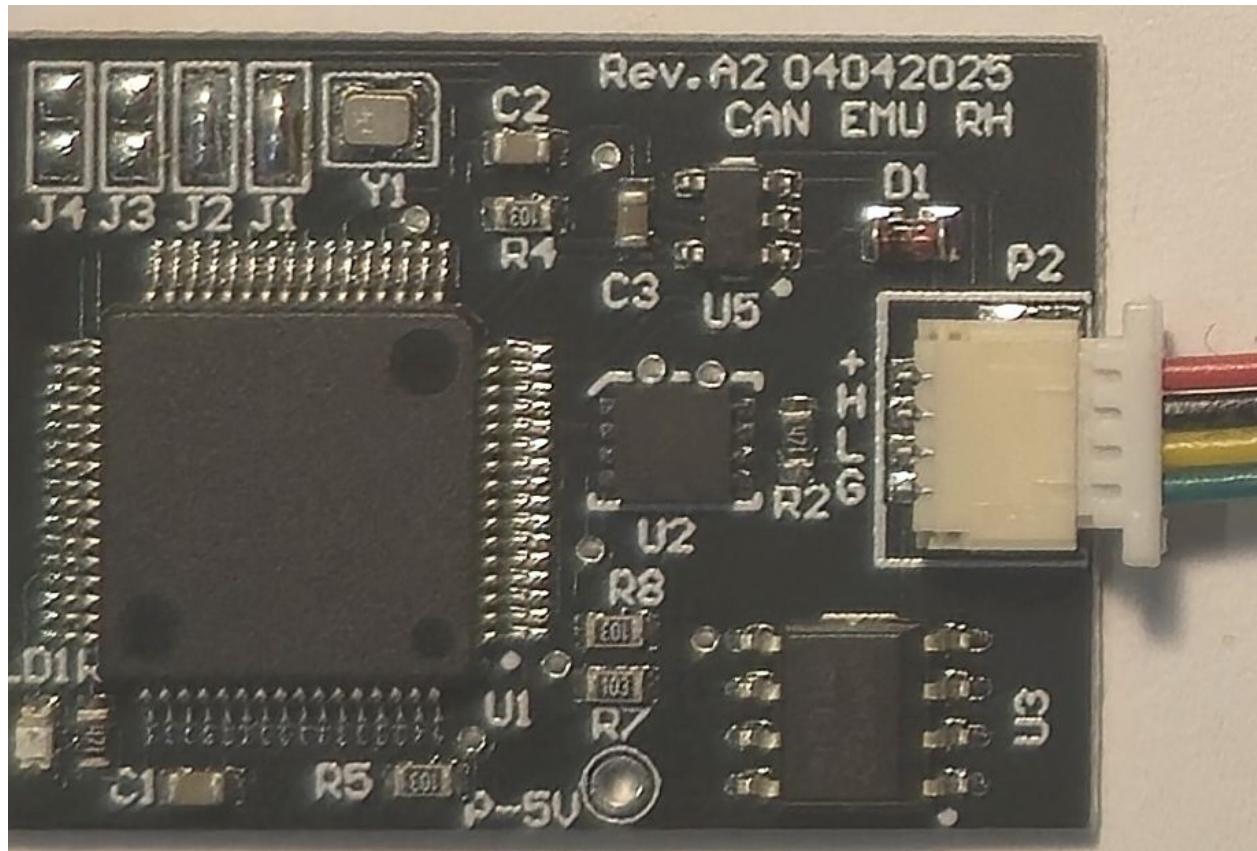

RED +12V
Black CAN H
Yellow CAN L
Green GND

J1...J4 -set configuartion Emu:

J1 , J2 , J3 , J4 - Open -Emulator Renault Fast (CAN 500 Kbaud)
J1 -Closed , J2 , J3 , J4 -Open -Emulator Renault Slow (CAN 250 Kbaud).

On Emulator we have eeprom 24c01. In first 6 bytes we put ISK.

LED indicator :

1. LED is ON - Immo released success
2. LED is OFF - Wrong ISK in Emulator
3. LED Blinking not regular- ecu is in antiscan mode- switch ignition OFF/ON and should be changed to LED ON