


CMB_LCDTFT_ENTRY

Table of contents

Overview	3
Jtag Connection	3

Overview

Requiments:
UHDS Interface
Jtag Interface
PT0030 Activation
JG0025 Activation

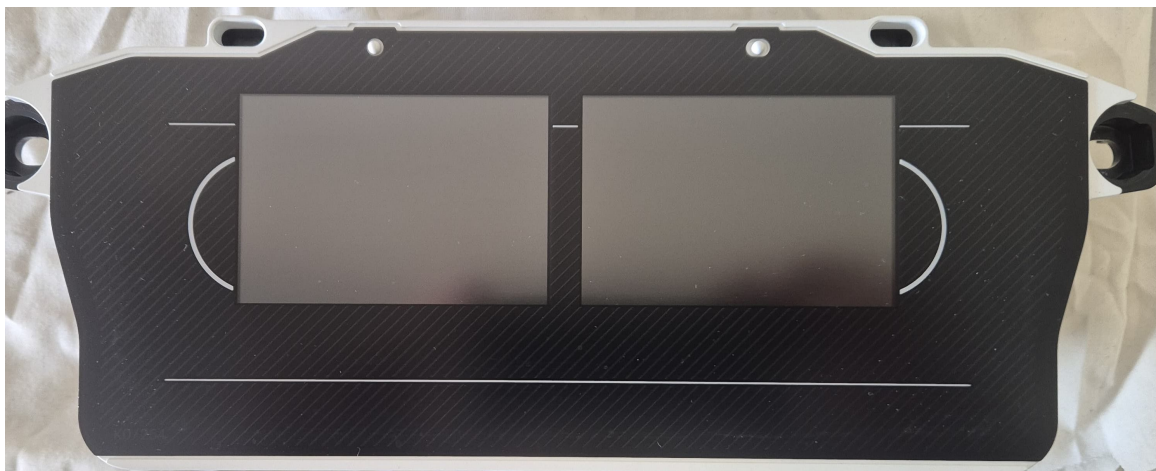

Jtag Connection

1. Connect Jtag as on picture and Read Dataflash
2. Use dump tool for Reset Km (dash will be reset to 0 km)
3. Write New dump into MCU
4. With removed daash set new km in BSI by OBD and drive 2-3 km
5. Put dash into car -that is all

R7F701402 8MHz SPI Connection

