

Fiat_LBSS

Table of contents

Getting Started 3

 System requirements 3

 Getting help 3



Getting Started

System requirements

- 1 UHDS
2. Cable Bench Connection
3. Proper activation. Select from menu your module and press Unlock . If Licence is required soft show you licence number

Getting help

Version 1

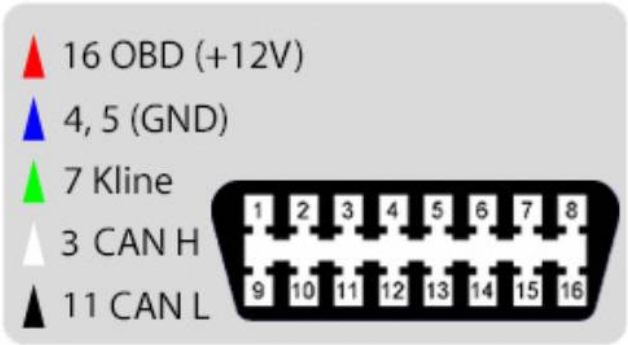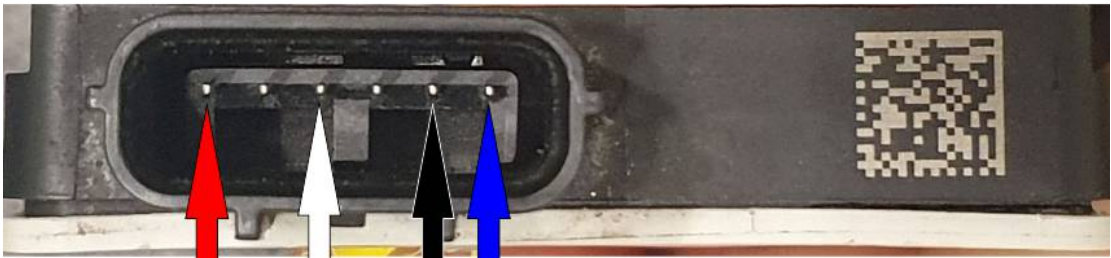

Version 2



▲ 16 OBD (+12V)

▲ 4, 5 (GND)



▲ 7 Kline

▲ 3 CAN H

▲ 11 CAN L



Version 3

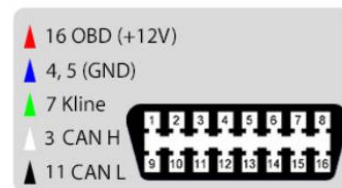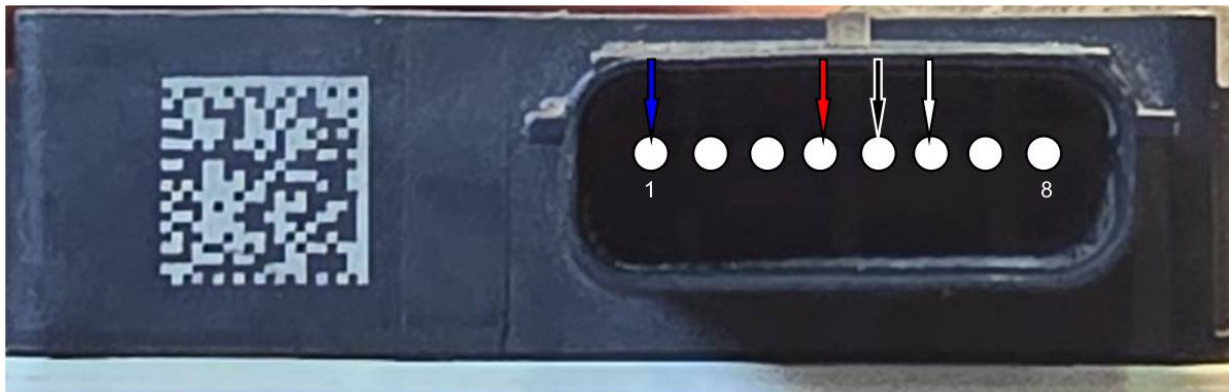

Note : Pin2 if we stay not connected then module is LBSS.
 PIN2 If we connect to GND then module will be diagnose as RBSS