

Suzuki_Fronx_R7F701442

Table of contents

Getting Started 3

 System requirements 3

 Getting help 3

Getting Started

System requirements


Required:

Jtag Interface
UHDS Interface

JG0025 Licecnce (jtag)
SZ0009 UHDS

Getting help

R7F701442 (8MHz) SPI Connection

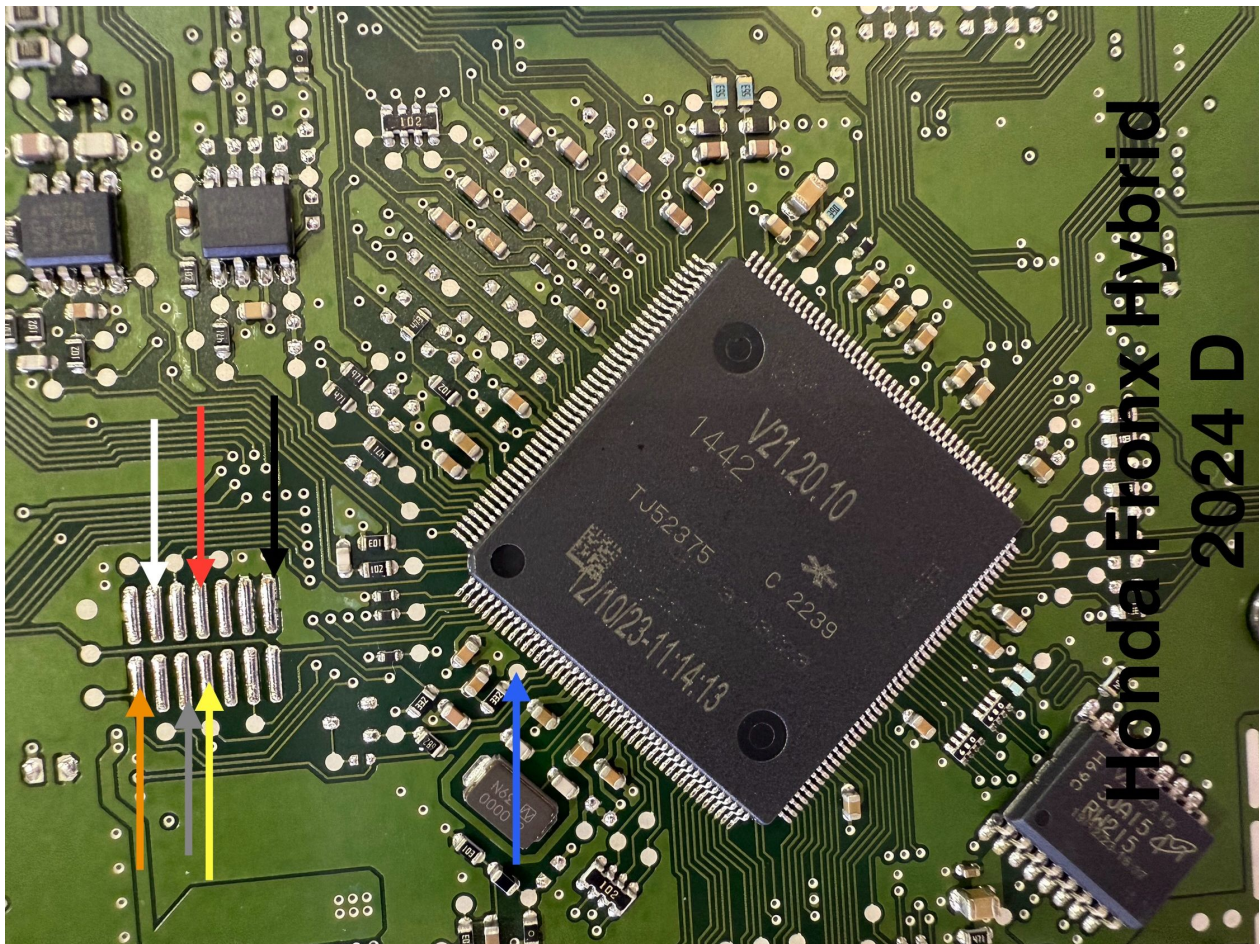

Externa power 12V is not required. You can Connect it only for switch On dash on bench .

