

Volvo_VCM

Table of contents

Getting Started	3
System requirements	3
Getting help	3

Getting Started

System requirements

Required :

- 1.Jtag Interface
2. UHDS Interface
- 3.JG0035 activation
- 4.VO0030 activation


Getting help

Reset Battery Life VCM

First we have to Read PIN from VCM. Connect Jtag as on picture and press Read PIN .

Next we put module into car and by OBD we can clear lifetime battery counter.

SPC564B70 ver 1

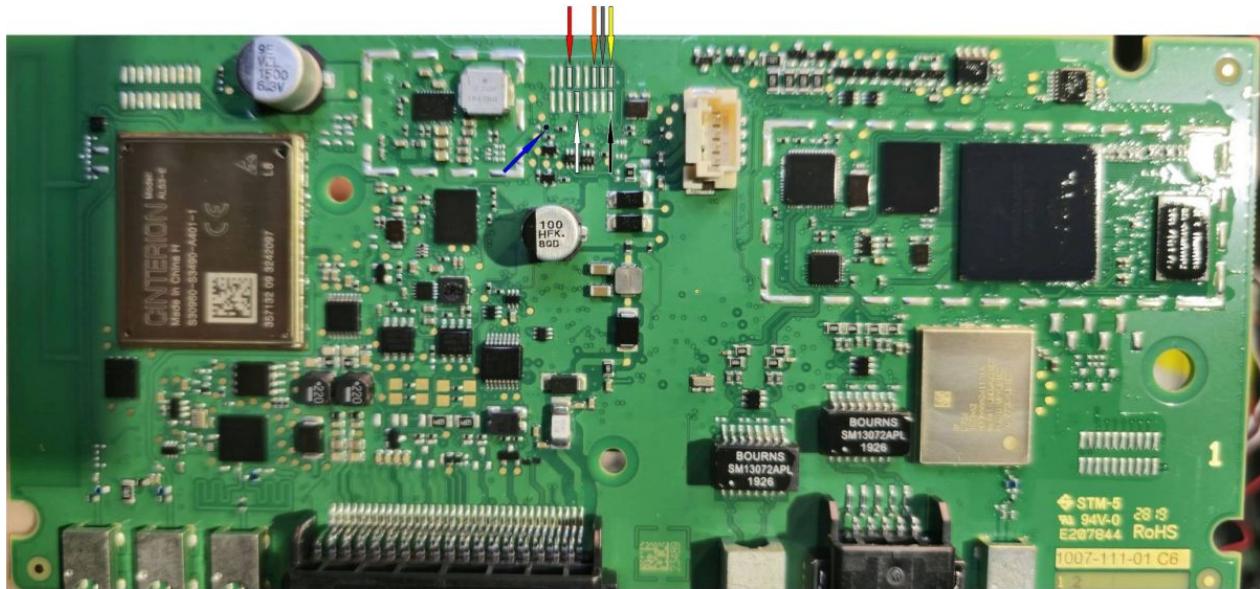

SPC564B70 ver 2

