

AirBag\_Kia\_R7F7015803

## Table of contents

---

Requirements .....	3
Clear Crash procedure .....	3
Bench connection by CAN FD .....	4

## Requirements

---

UHDS  
Jtag  
EEprom programmer for program 95256 memory  
Sonde v1  
JG0050 Activation  
AB0072 Activation

## Clear Crash procedure

---


For Clear Crash we have to do 2 steps:

1. Clear Crash inside MCU by solder wires as on diagram and press button clear crash by jtag
2. Program 95256 eeprom with file : [95256 EEeprom File](#)

After it you can check errors on bench.

If crash is removed when you press erase errors you get message Command accepted. If we get answer command refused mean something is wrong

# R7F7015803 (20MHz)

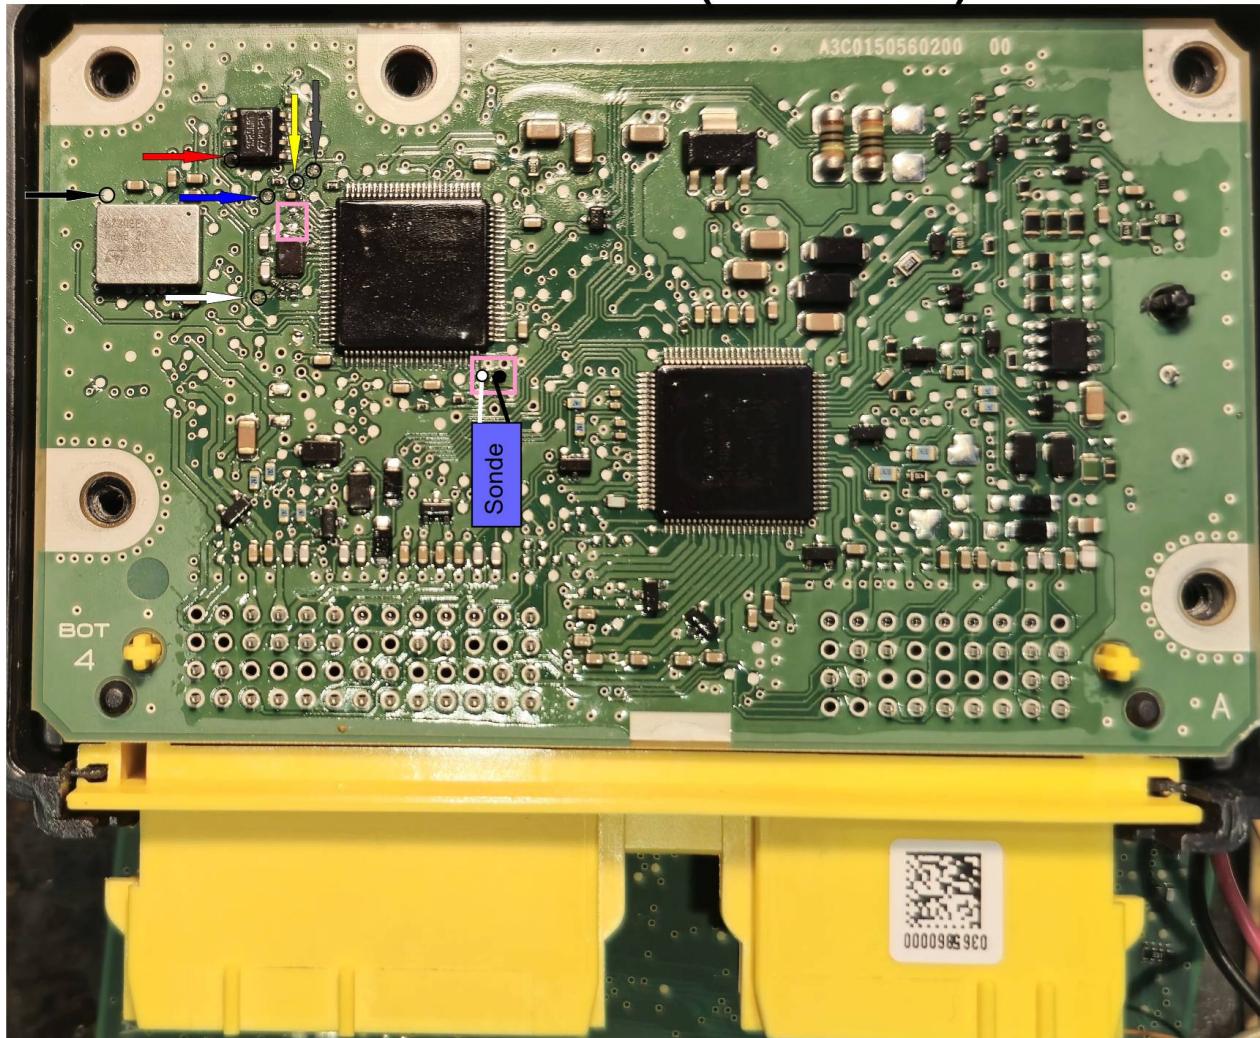

Sonde 4.7R  
 Desolder 2 capacitors

Remove this Component .  
After programming install Back  
If you lost it you can solder 100nf  
capacitor.

## Bench connection by CAN FD

This connection is only for read / erase Errors

# CAN FD \*

## Kia/Hyundai Continental RH850 2020...



\* CAN FD - UHDS must be with Sn8800... and must have instaled CAN FD chip.  
For check it press read errors and you have to get info CAN FD Instaled

License Accepted  
CAN FD Instaled