

BYD_R7F701330_AirBag

Table of contents

Getting Started	3
System requirements	3
Getting help	3
Jtag Connection Clear Crash	3
Bench Connection by CAN	5

Getting Started

System requirements

UHDS
Jtag
EEProm programmer for program 95256 memory
Sonde RH850P
JG0050 Activation
AB0070 Activation

Sonder required:

https://smokftp.smok.com.pl/Manual/RH850_Sonde_P.png

Getting help




Clear Crash you must to do by jtag

For Test module on bench connect bodule by CAN (read/erase errors)



Jtag Connection Clear Crash


1. Desolder 8 capacitors as on picture
2. Solder all connections as on picture
3. Solder Sonde RH850P wires as on picture , use P1 output from sonde
4. Press Button "Clear Crash Jtag"
5. Solder Back capacitors

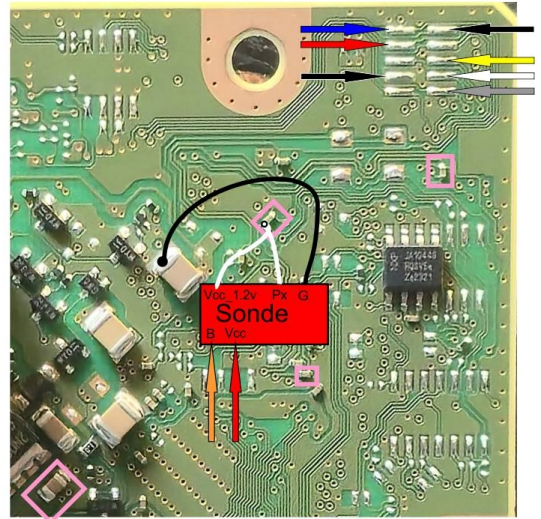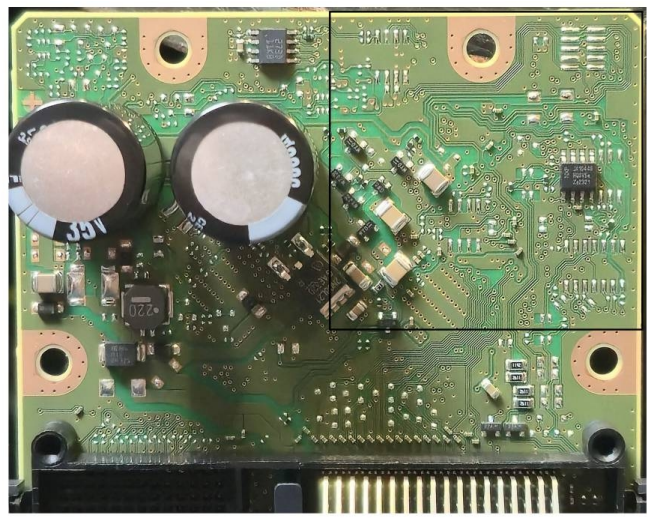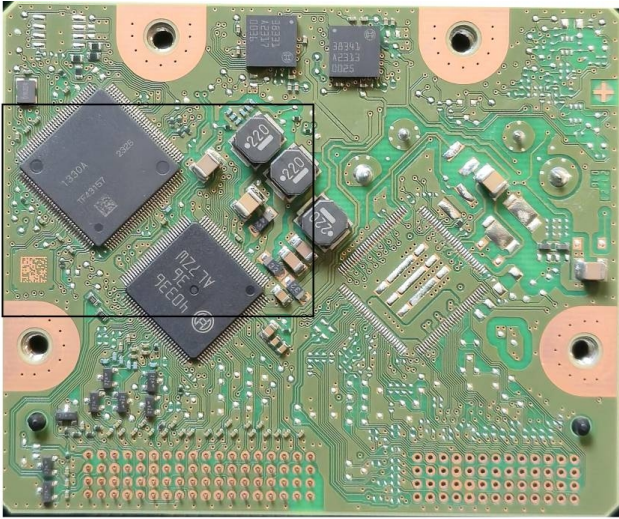

Sonde v2 P1 (0.33R)
Desolder 8 capacitors



Remove this Component .
After programming install Back
If you lost it you can solder 100nf
capacitor.

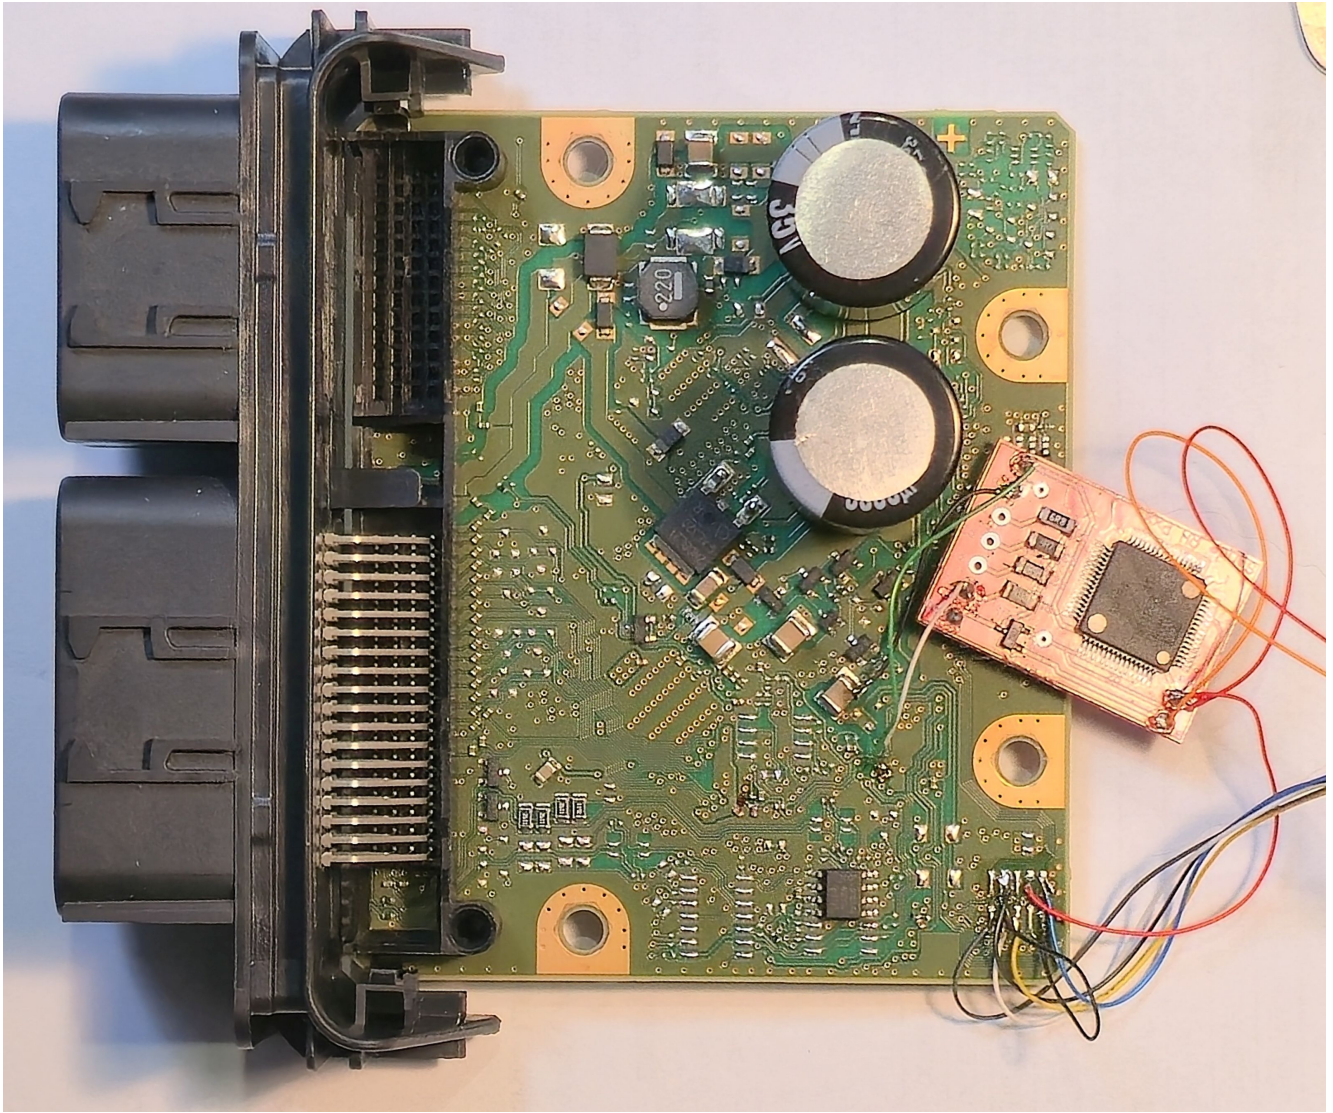

Bench Connection by CAN

BYD AirBag

