

Dodge_AirBag_R7F70106
43

Table of contents

Requiment 3

Clear Crash By CAN 3

Clear Crash by Jtag 5

Requiment

1. UHDS
2. Jtag (only if clear crash by CAN is no possible)
3. Jtag sonde v1 (only if clear crash by CAN is no possible)
4. Cable Bench Cnnection




Clear Crash By CAN

For Read / Erase errors on bench connect +12V ,GND and Diagnstic CAN


For Clear Crash on bench connect +12V ,GND and Clear Crash CAN

If we press button Clear Crash and get command refused - you must use jtag and clear crash by Jtag

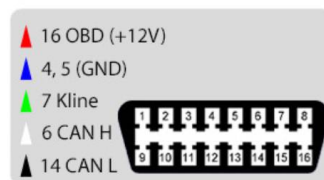

Clear Crash by Jtag

R7F7010643 16MHz

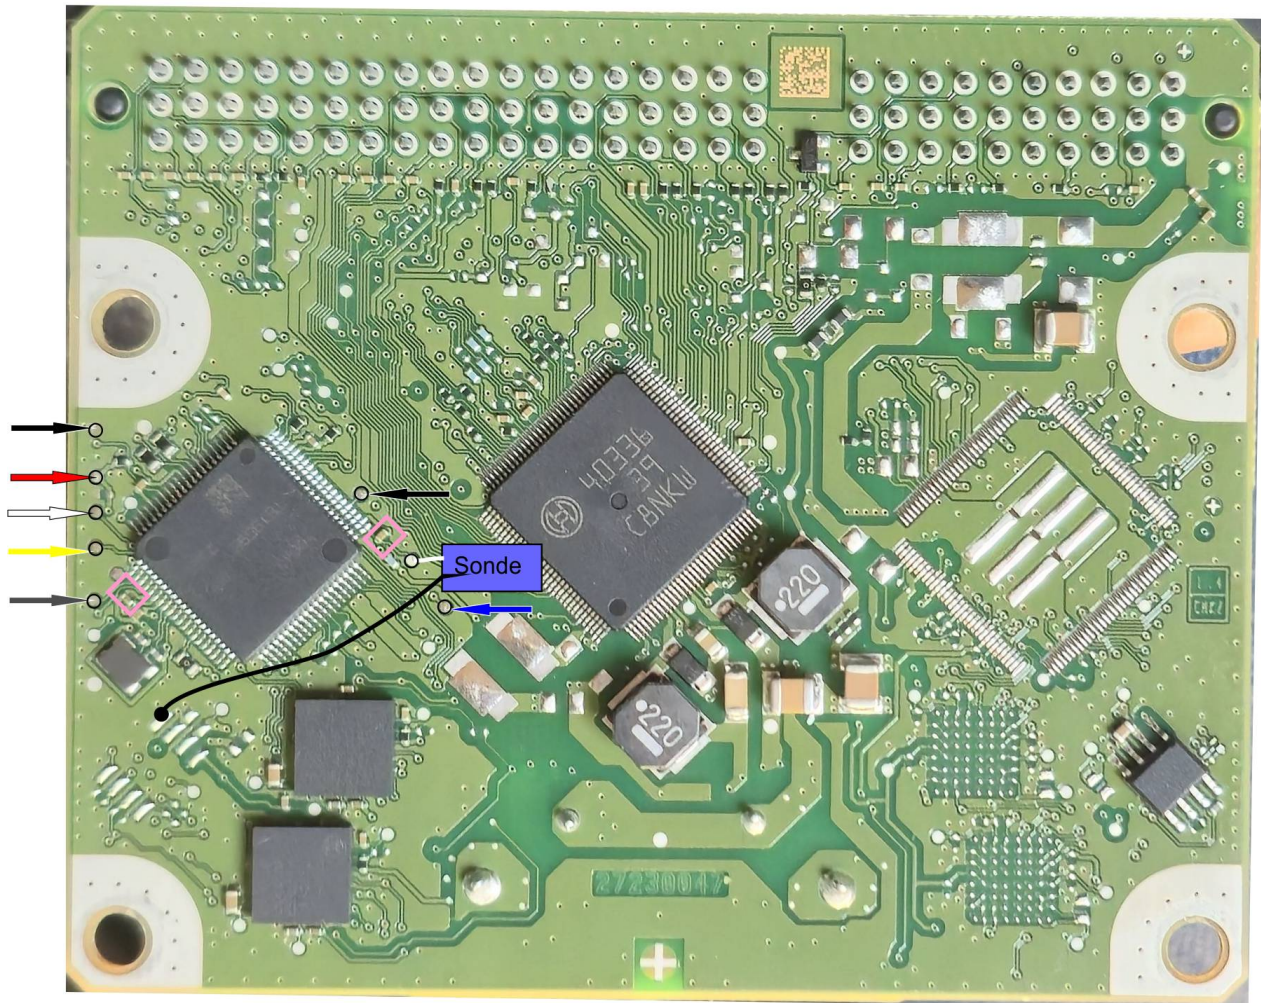

Sonde 4.7R or 6.8R
Desolder 2 capacitors

☐ Remove this Component .
After programming install Back
If you lost it you can solder 100nf
capacitor.