

VW_AirBag_R7F701330

Table of contents

Getting Started	3
System requirements	3
Getting help	3

Getting Started

System requirements

Requirements:

UHDS

Jtag

EEProm programmer for program 95256 memory

Sonde RH850P

JG0050 Activation

AB0070 Activation

https://smokftp.smok.com.pl/Manual/RH850_Sonde_P.png





Getting help

1. Desolder 8 capacitors as on picture
2. Solder all connections as on picture
3. Solder Sonde RH850P wires as on picture , use P1 output from sonde
4. Press Button "Clear Crash Jtag"
5. Solder Back capacitors

Do not power Airbag module from 12 V !!!!



After Finish crash close module and you can power module from 12V and check Errors on bench

AirBag VW R7F701330

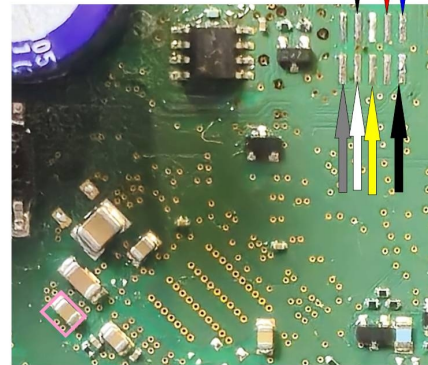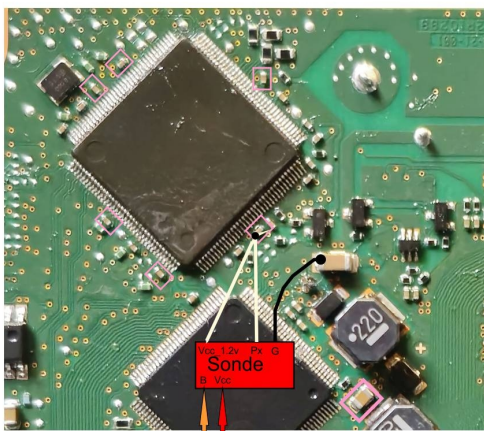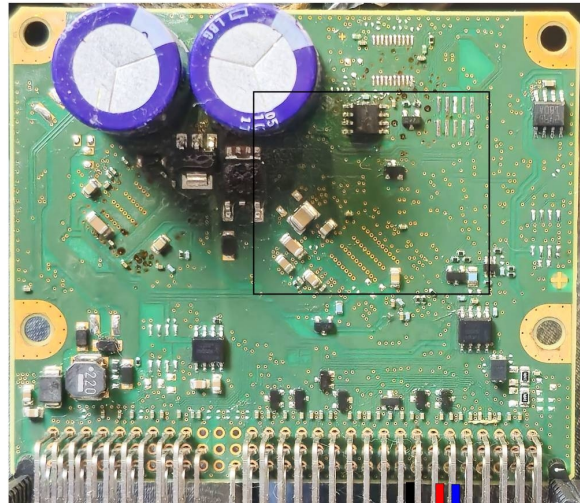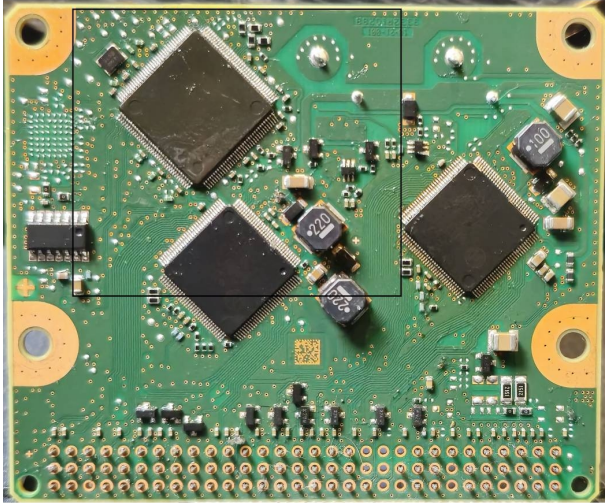

Sonde v2 P1 (0.33R)
Desolder 8 capacitors

☐ Remove this Component .
After programming install Back
If you lost it you can solder 100nf
capacitor.

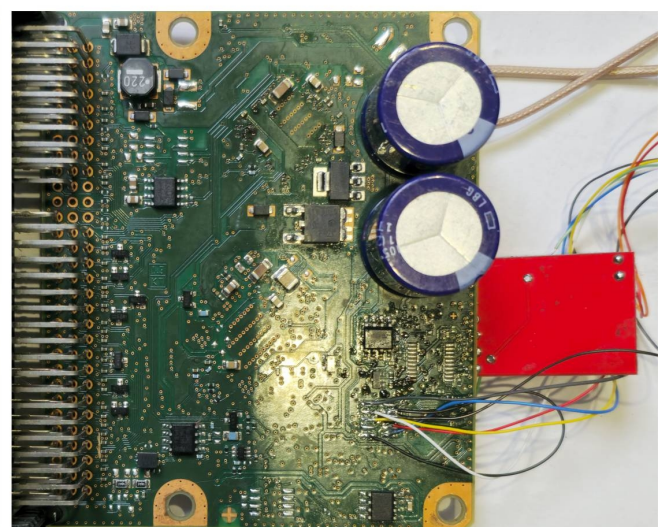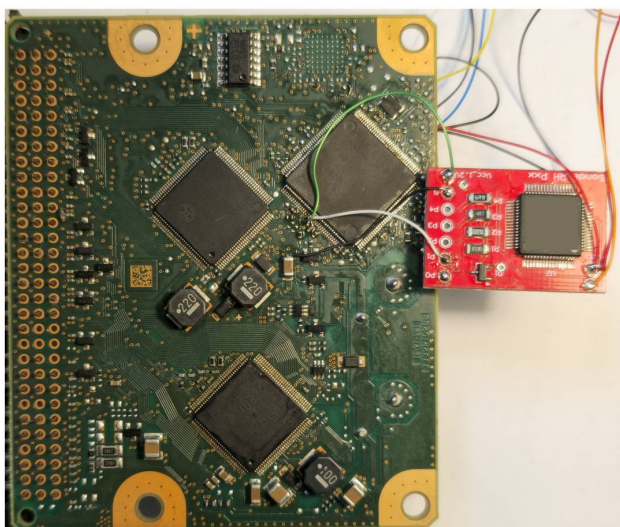

Connection only for test module on Banch

