

Volvo_R7F701330sec_Airba
g

Table of contents

Getting Started 3

 System requirements 3

 Getting help 3

Getting Started

Supported Airbag model : P32387684

System requirements

Requirements:

UHDS

Jtag

EEPROM programmer for program 95256 memory

Sonde RH850P

JG0050 Activation





AB0070 Activation

https://smokftp.smok.com.pl/Manual/RH850_Sonde_P.png

Getting help

1. Desolder 8 capacitors as on picture
2. Solder all connections as on picture
3. Solder Sonde RH850P wires as on picture , use P1 output from sonde
4. Press Button "Clear Crash Jtag"
5. Solder Back capacitors

Note: No possible to Read/Erase Errors by CAN on bench connection (only on Car)

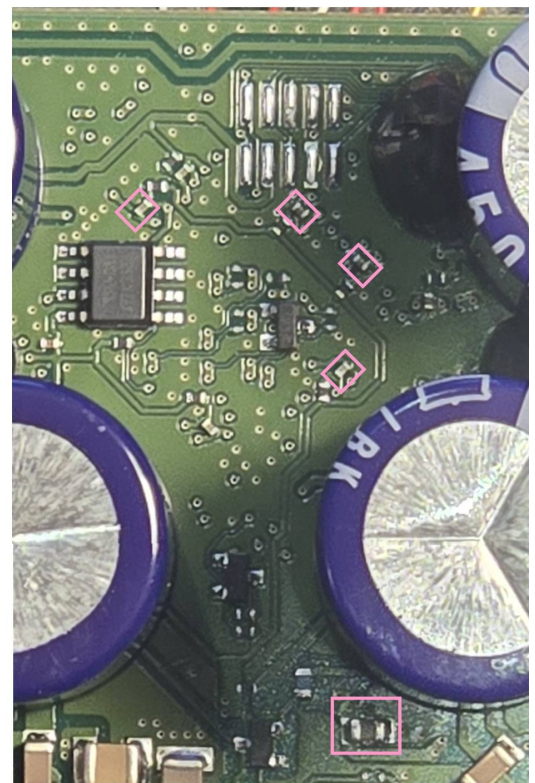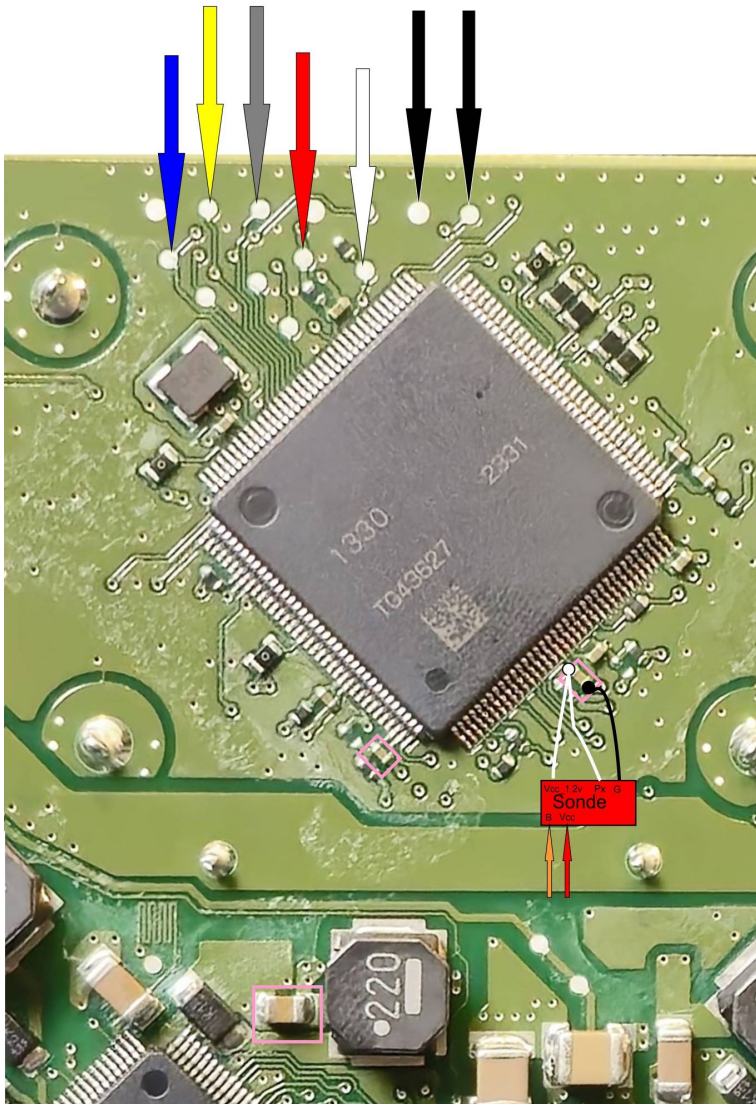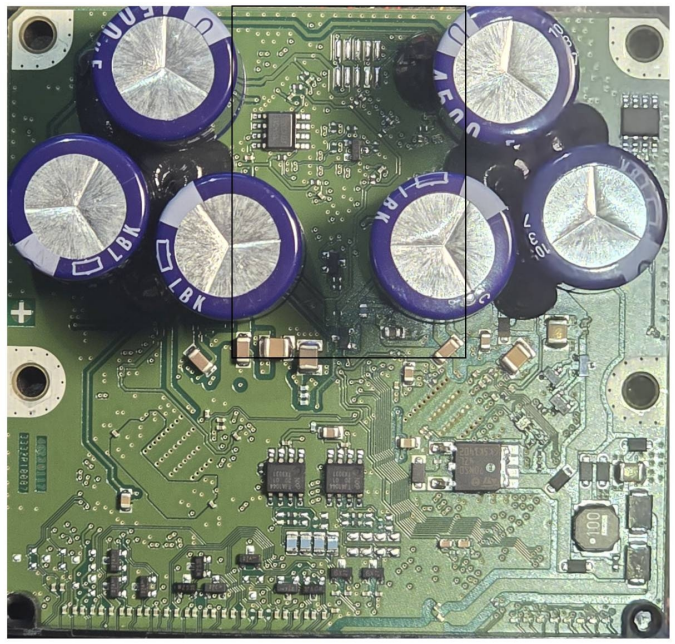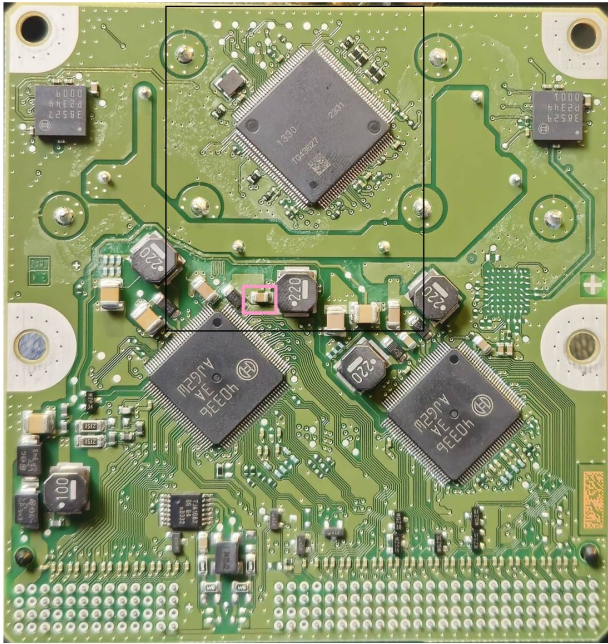

Remove this Component .
 After programming install Back
 If you lost it you can solder 100nf
 capacitor.

Sonde v2 P. 0.33R

Desolder 8 capacitors